




1 Start with handle base

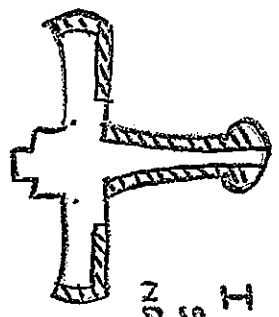

2 GLUE ON SPACERS F, G, H, I


3 MAKE MECHANISM



FLORAL WIRE WORKS WELL FOR THIS

2 1/4 inches


4 Add wooden Dowel and rubber band

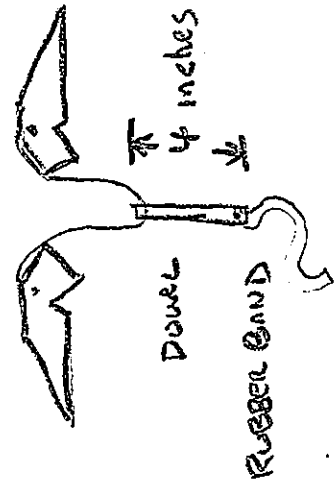

Dowel RUBBER BAND


Because it needs to push and pull

5 mount mechanism into handle base with 2 small dowels or barbecues make sure it works smooth. ~~screws~~

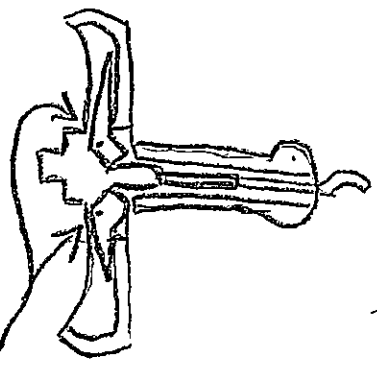


\* frequently test the function as you build and before glue

6 add cross guard cover

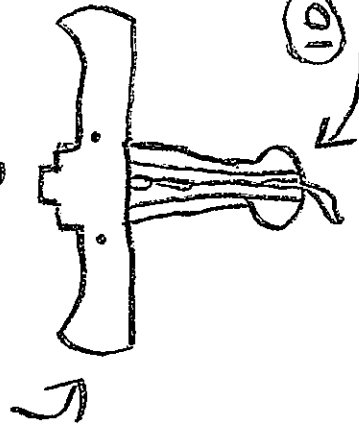


8 add ornamental cross guard cover

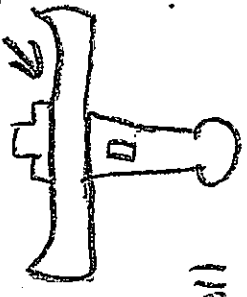


10 tighten rubber band so it works well glue or tape in shape





11 paint it

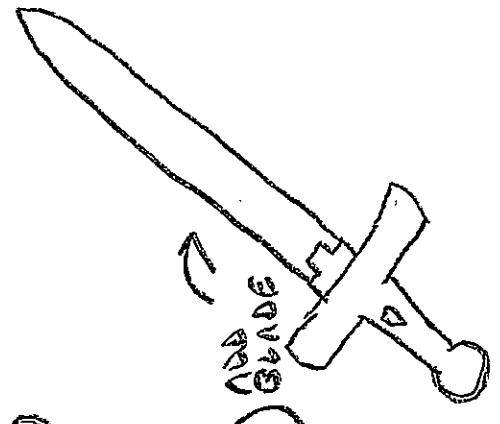


9 ADD BLADE


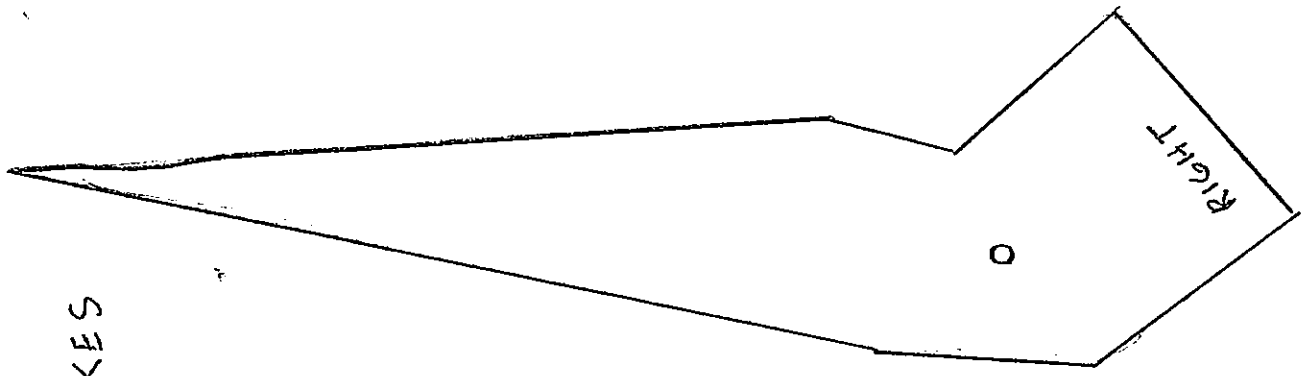


SPIKES

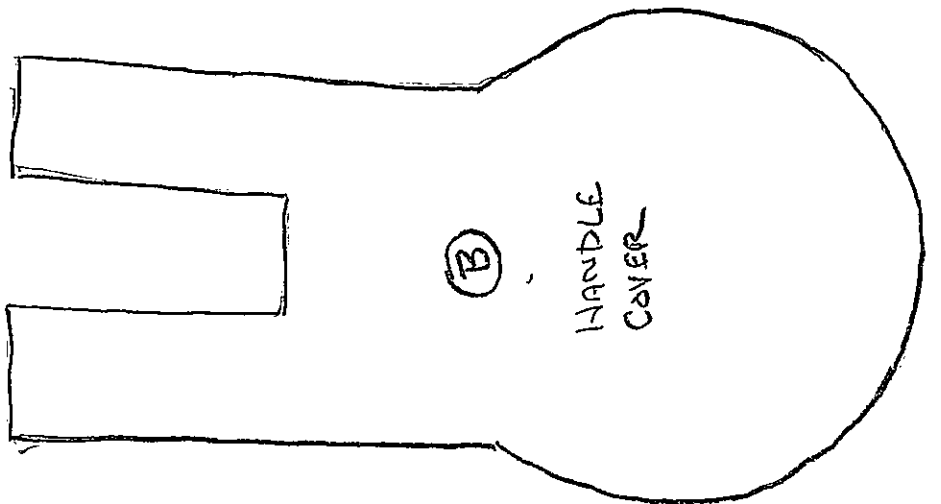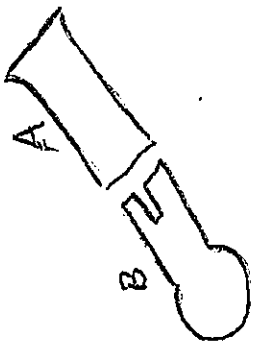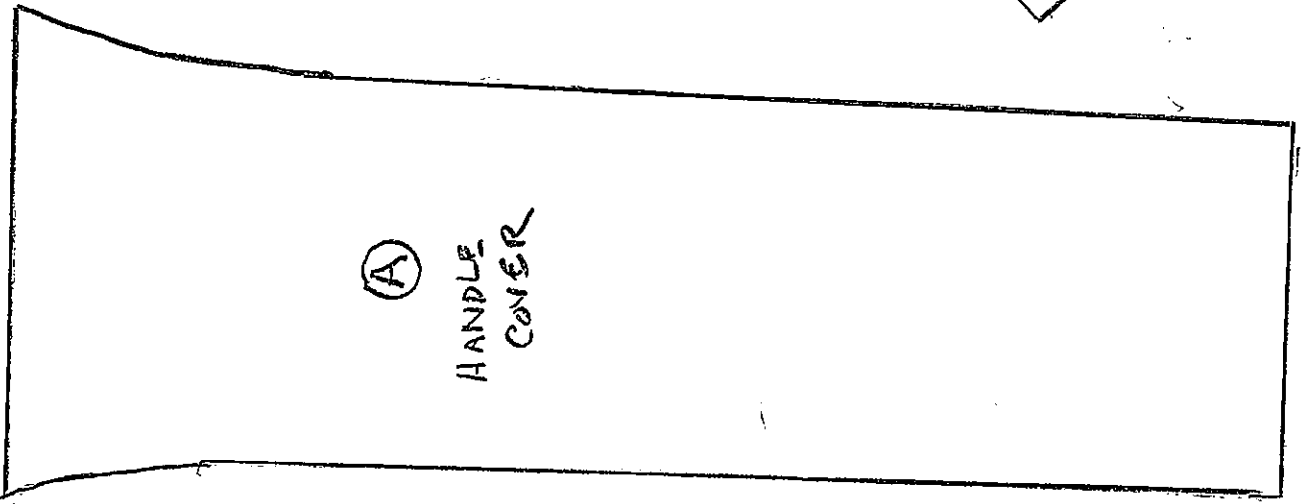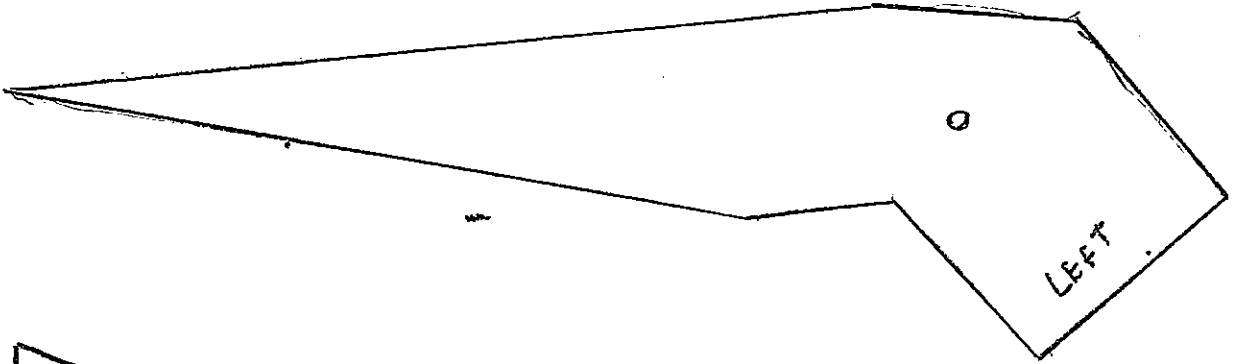


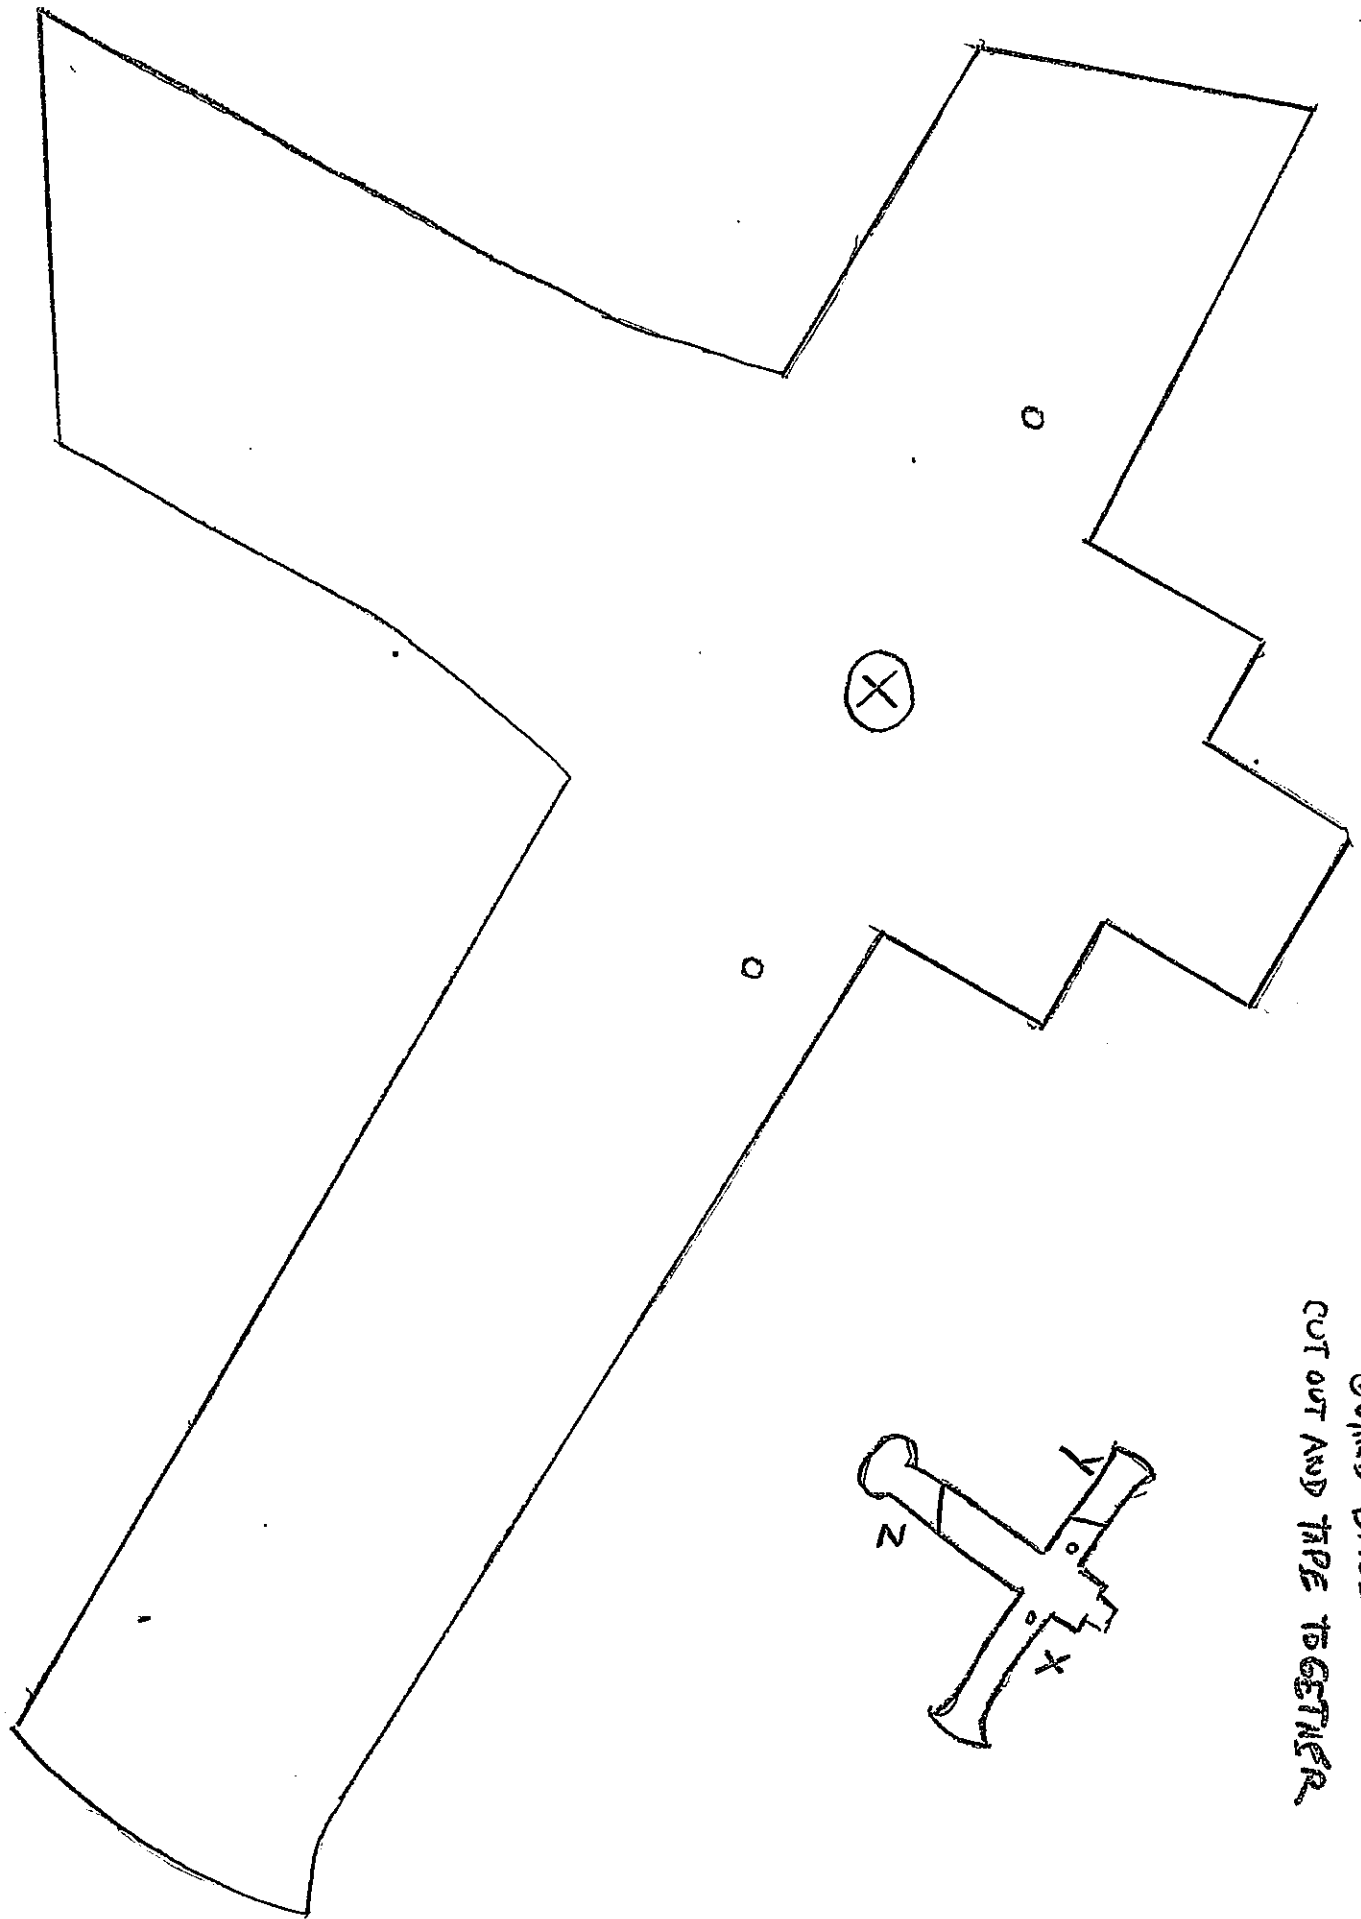

HANDLE AND  
GUN BASE  
CUT OUT AND TAPE TOGETHER.

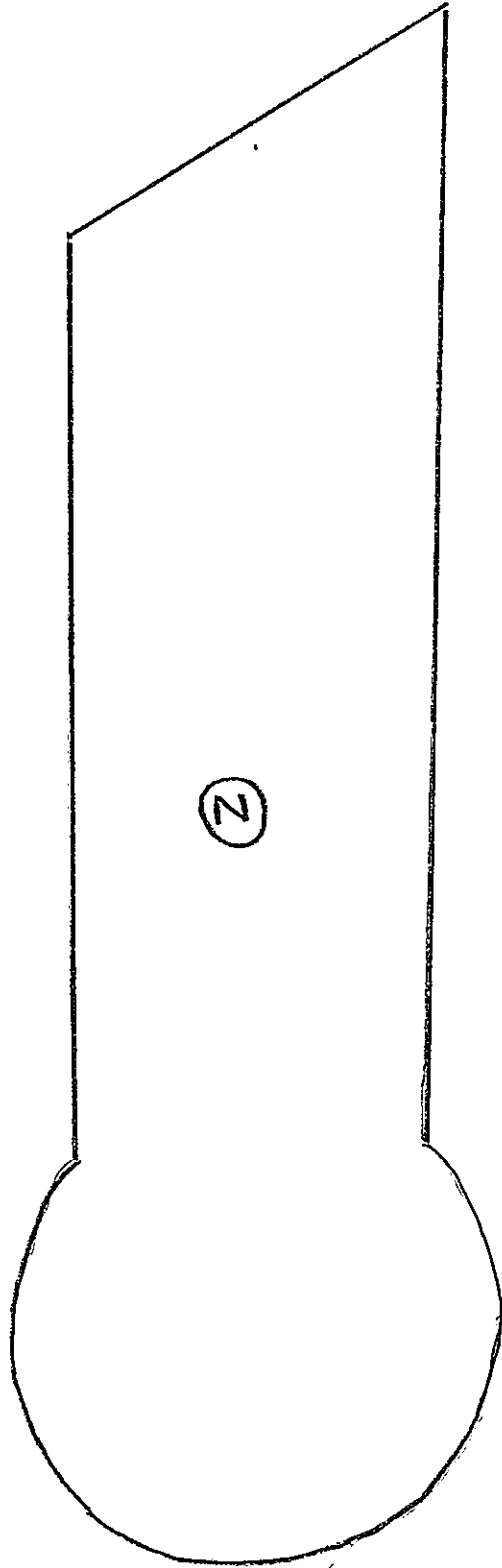
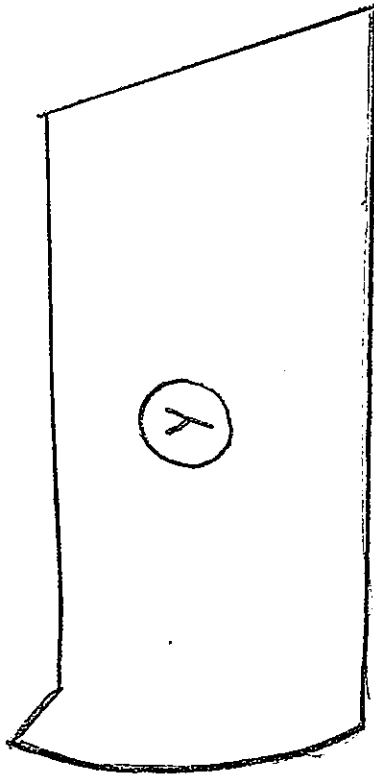


GUARD COVER  
CUT OUT AND  
TAPE TOGETHER



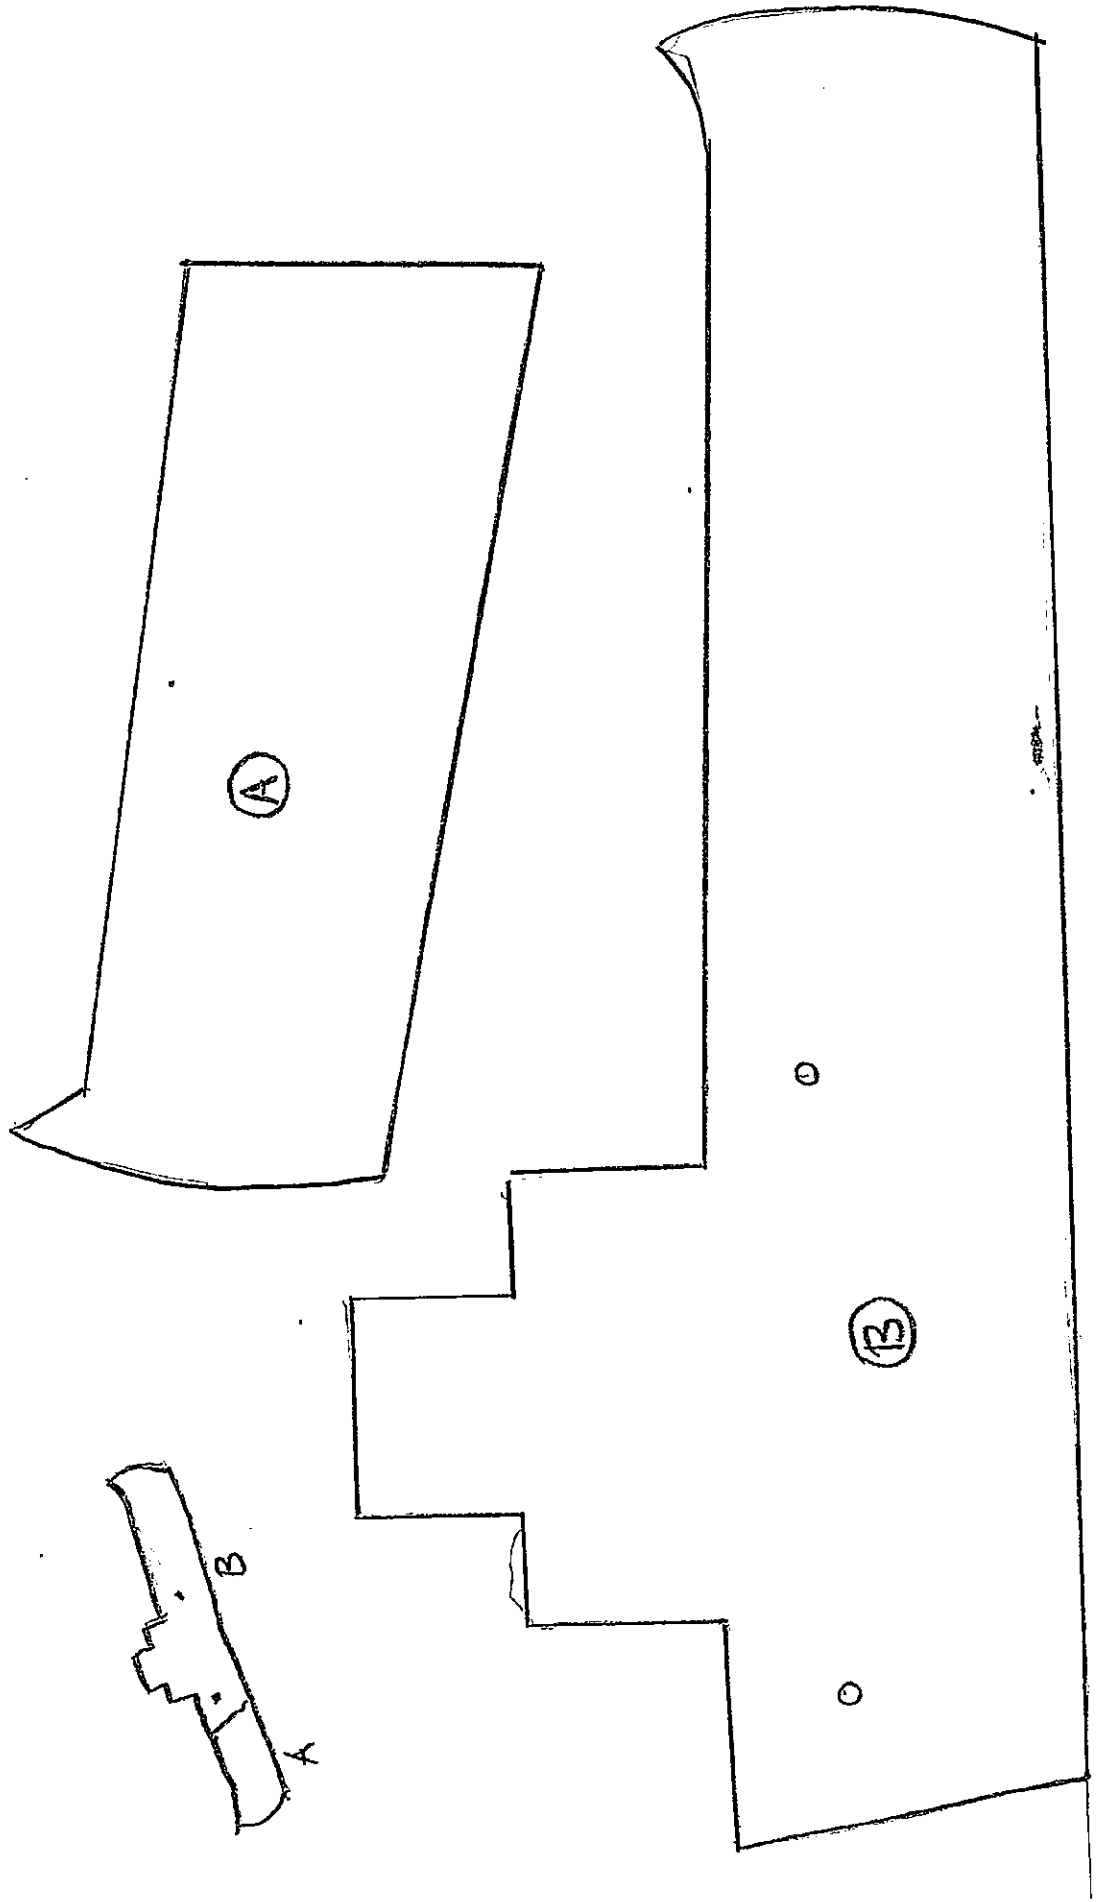


Crossquard cover

Cut out and tape together  
like this

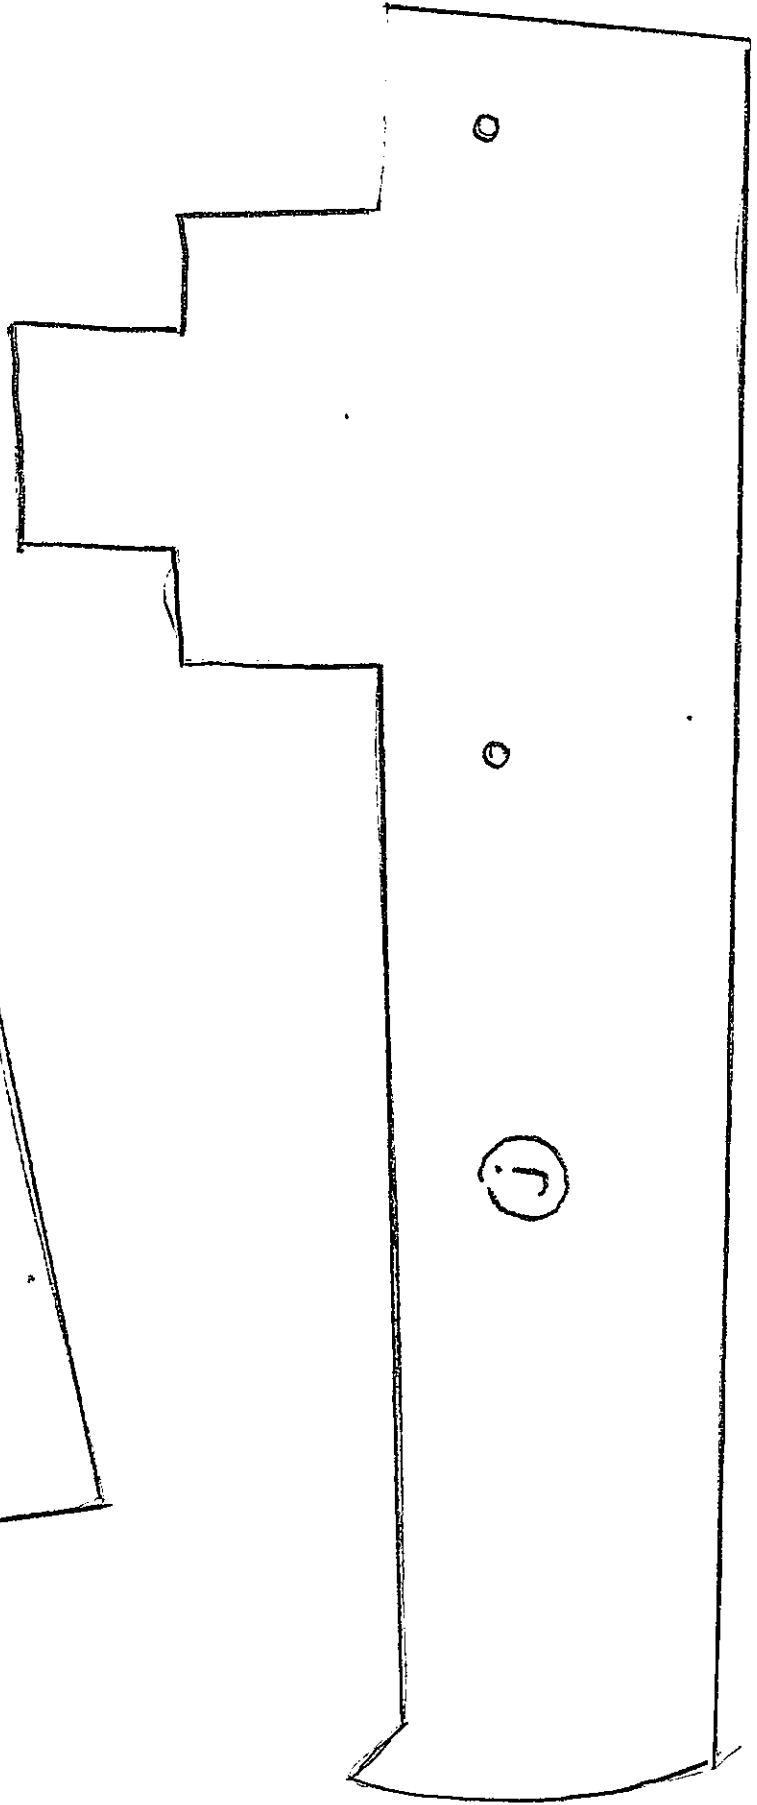
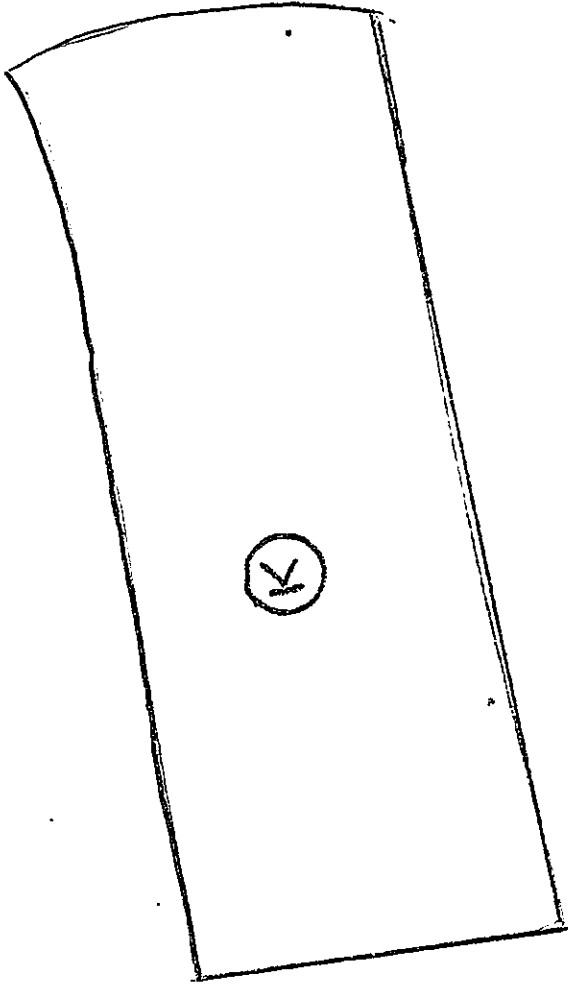


ORNAMENTS CROSSGUARD COVER  
CUT OUT AND  
TAPE TOGETHER

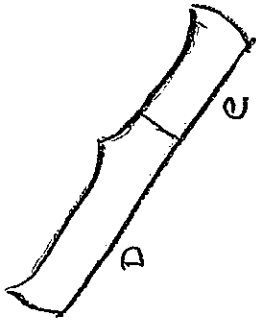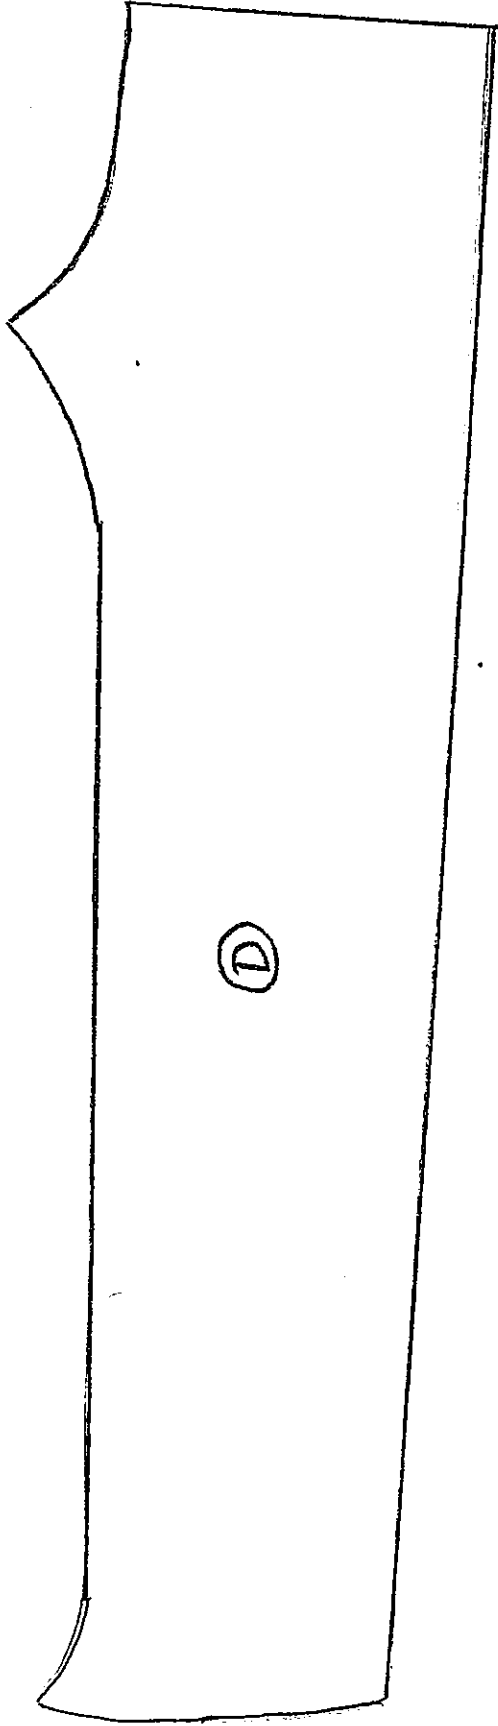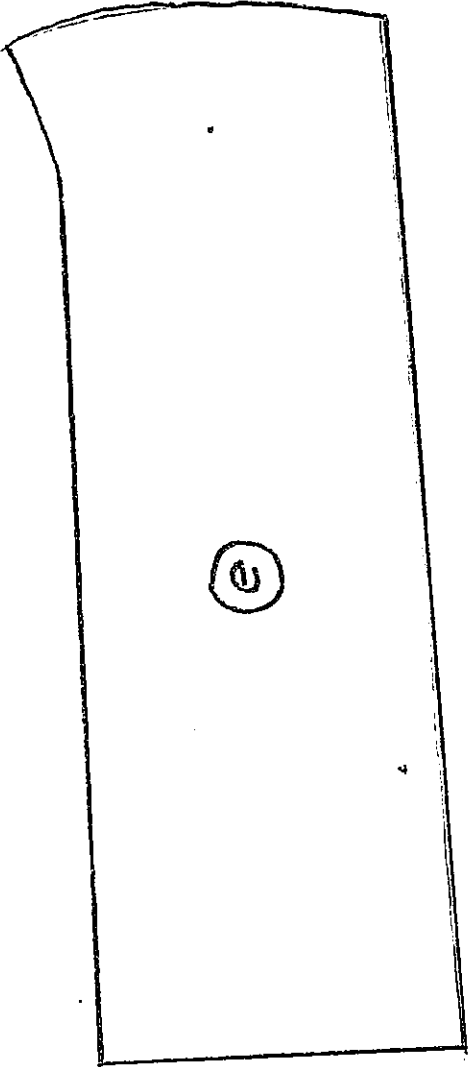


INTERNAL SPACES


OR  
OUT, TRACE ONTO FOAMBOARD OR CORRUGATED  
AND GLOE ONTO HANDLE BASE LIKE THIS

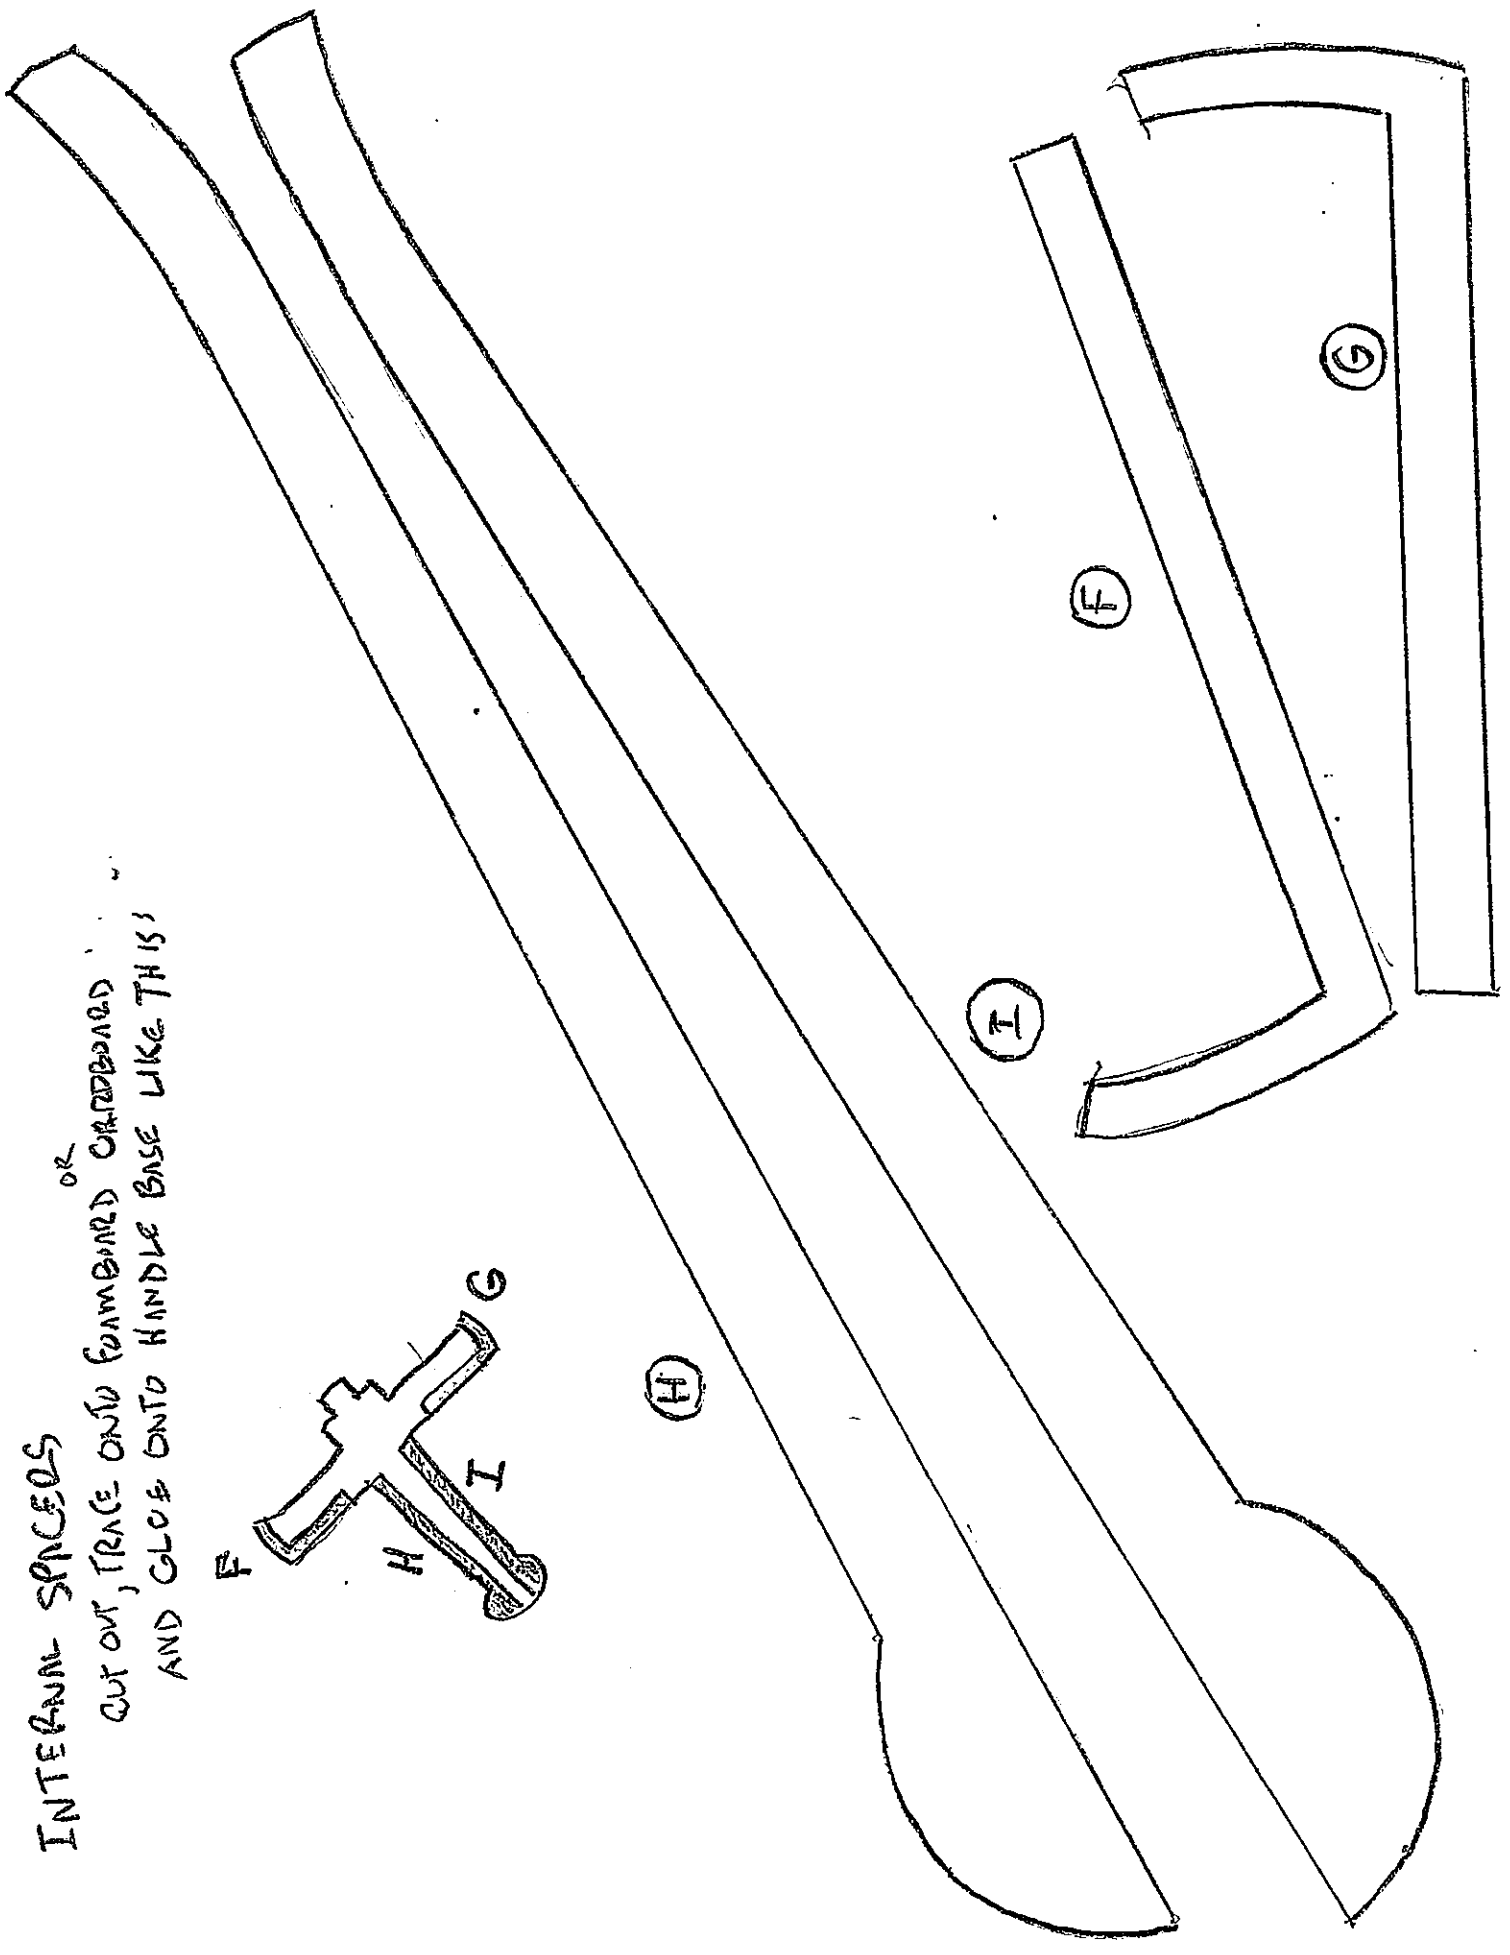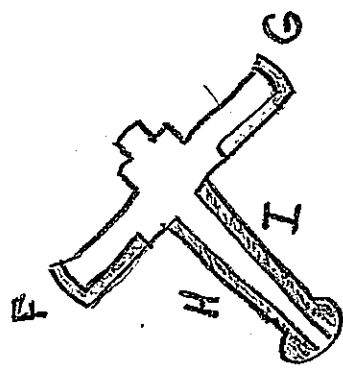




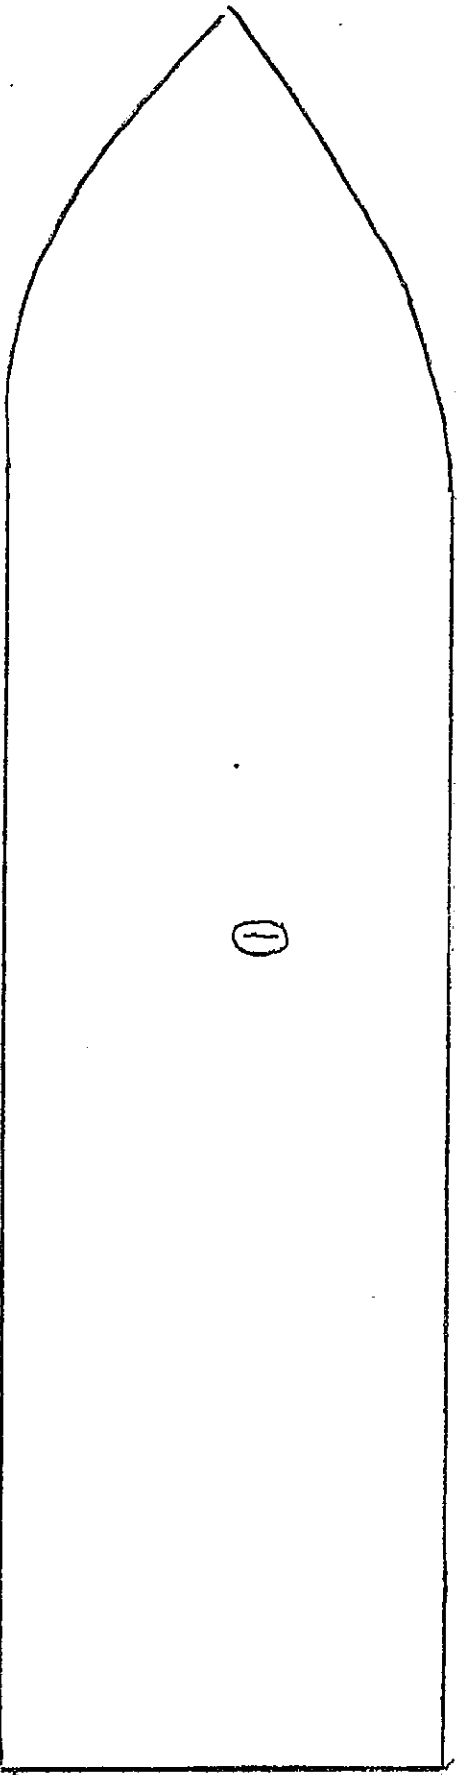


①

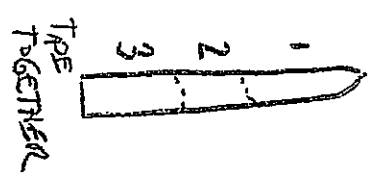

TAPE  
TOGETHER

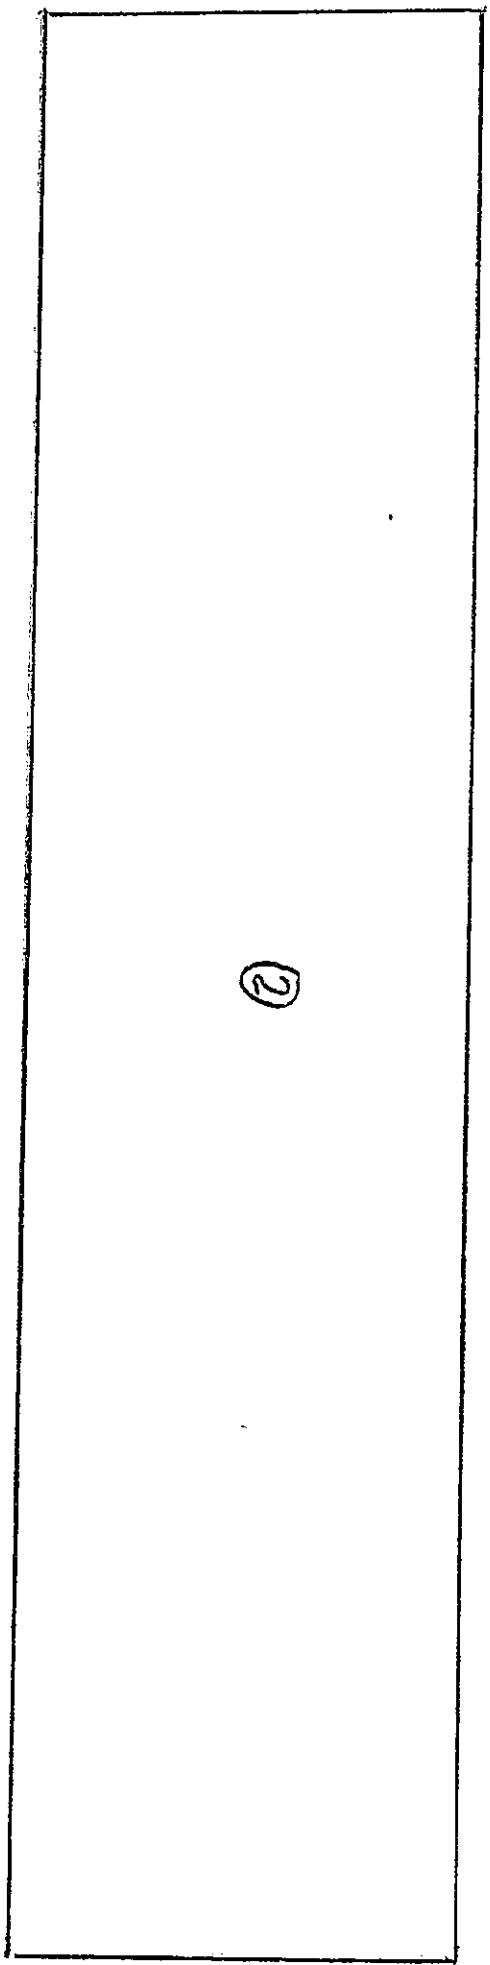

②

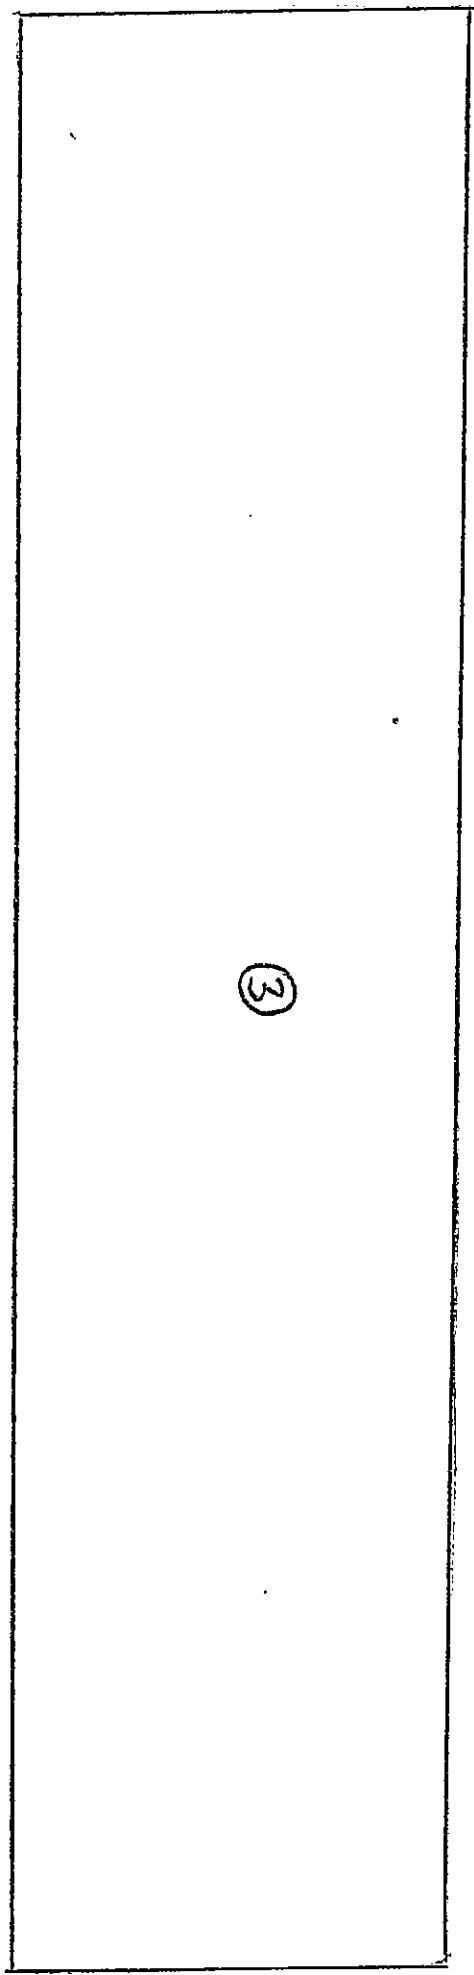

③